USER GUIDE




ON BALANCE™



Thanks for purchasing the CHAMPION Digital Mini Scale! This User Guide is designed to get you up and running quickly with your scale. Scales are precision instruments and require proper care and skill to get the best results. If you have questions or need support, visit us at http://www.obscales.com/support or scan the QR Code on the back of this manual using your smartphone.

What's In The Box

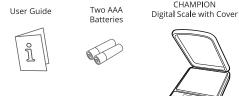

Key Descriptions

ம் - Turns the scale


ON or OFF.

M - Changes the mode/weighing unit.

Z/T - Zeroes the


scale. Also subtracts the weight of an empty container (see Tare Function).

凸 - Enters calibration mode. See Calibration.

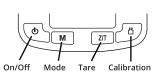

Weighing Your First Item

- 1. Press the **ON/OFF** key to turn the scale on.
- 2. Place the item on the centre of the weighing platform.
- Wait for the stability indicator to display, then take your reading from the display. You can press the

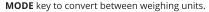

 The scale's auto-off function will turn the scale off after 3 minutes of inactivity or you can press the ON/OFF key to turn the scale off.

Things To Avoid



Unlevel Surfaces



Radio Frequency Interference



High Humidity



Air Currents



Vibration



Extreme Temps

Tare Function

The Tare function allows you to subtract the weight of a container so that the display only shows the weight of the contents.



Place an empty tray or container on the platform and wait for the stability indicator. Press the **TARE** key to subtract the container's weight. Add items to the container to see their weight on the display.



NOTE: The weight of the container will subtract from the available capacity and will leave a negative value on the display once the weight is removed. Press **TARE** again to return the display to zero.

Accuracy

Your scale comes calibrated from the factory and most users won't need to calibrate their scale for a long time. You should check your scale's accuracy periodically using the included calibration weight and perform calibration if necessary.



NOTE: Only use trusted calibration weights. Household items such as bottles and cans with weights printed on the side are not suitable for checking accuracy as these values are approximate and don't include the container weight (Net Weight).

Calibration



Calibration adjustment is permanent and should only be performed using accurate calibration weights that match the requirements for your scale (see the chart on back). Do not use coins or other household items to calibrate.

- 1. Prepare the calibration weight.
- 2. Find a flat and level surface to perform calibration and let the scale adjust to room temperature.
- 3. Press **(**) to turn the scale on and wait for the scale to stabilise.
- 4. Press the 凸 key. The display will show 'CAL'.
- 5. Make sure nothing is on the platform then press 1 to confirm the zero point.
- The display will then flash the required calibration weight.
- 7. Place the required calibration weight on the centre of the platform.
- 8. The display will show 'PASS' then return to normal weighing mode. You may

now turn the scale off or continue weighing.

Specifications

Model	CH-600
Max Capacity	600.0 g / 21.16 oz / 19.29 ozt / 385.8 dwt
Readability	0.1 g / 0.01 oz / 0.01 ozt / 0.1 dwt
Weighing Units	g, oz, ozt, dwt
Dimensions	Overall: 118 mm x 80 mm x 22 mm Platform: 71 mm x 65 mm Display: 36 mm x 13 mm
Calibration Weight	500g (sold separately)
Power	2 x AAA Batteries
Warranty	10 Year Limited Warranty
For more information, including weighing tips and support, scan this code with your smartphone Or visit us online at www.obscales.com/support/	